



No.	Part name	Qty.
1	Hexagon socket cap screws M5×25	6
2	Starter assy	1
3	Starter handle	1
4	Bushing	1
5	Starter rope	1
6	Starter cover	1
7	Spring	1
8	Ratchet seat	1
9	Starter spring	1
10	Washer	1
11	Ratchet	1
12	Screw	1
13	Washer	1
14	Nut	1
15	Pully	1
16	Washer Φ15×Φ10×1.2	
17	Oil seal(R)	1
18	Crankcase(R)	1
19	Crankcase gasket	1
20	Oil bearing 6202	2
21	Crankshaft	1
22	Key	1
23	Needle bearing K10*13*16	1
24	Piston ring	2
25	Piston pin	1
26	Piston	1
27	Piston Ring	2
28	Cylinder gasket	1
29	Cylinder	1
30	Screw M5×20	4
31	Spark plug	1
32	Ignition line	1
33	Spark plug cap	1
34	Ignition	1
35	Pin Φ5×10	4
36	Crankcase (L)	1
37	Screw M5 x 35	4
38	Oil seal(L)	1
39	Fly wheel	1
40	Nut M8	1
41	Washer Φ8×Φ18×1.5	2
42	Clutch	1
43	Waveform washer	2
44	Screw	2
45	Side cover	1
46	Sprocket	1
47	Snap Φ35	1
48	Bearing 6202	1
49	Snap Φ15	1

50	Connect plate	1
51	Screw M6×20	4
52	Rubber	1
53	Splint	1
54	Splint	1
55	Muffler cover	1
56	Screw M5×45	1
57	Screw M6×55	2
58	Pin	1
59	MUffler	1
60	Muffler gasket	1
61	Cylinder cover	
62	Inlete pipe gasket	1
63	Inlete pipe	1
64	Carburetor gasket	1
65	Carburetor	1
66	Air filter Assy	1
67	Air filter base	1
68	Iron sheet	1
69	Screw M5×55	2
70	Air filter sponge	1
71	Air filter cover	1
72	Air filter locknut	1
73	Screw	1
74	Throttle pole	1
75	Throttle	1
76	Fuel tank assy	1
77	Cap	1
78	Gasket	1
79		1
80	inlet pipe	1
81	Outlete pipe	1
82	Fuel pipe base	1
83	Oil filter	1
84	Fuel tank	1
85	Rubber	4
86	Fuel tank protector	1