



No.	Part name	Qty.
1	Muffler	1
2	Cross recessed large pan head self-tapping screw STSX14	2
3	Cylinder cover	1
4	Muffler gasket	1
5	Muffler	1
6	Spring washer Ø6	2
7	Hex socket screw M6x55	2
8	Hex socket combination screw M6x12	4
9	Piston pin	1
10	Piston pin circlip	1
11	Piston	1
12	Piston ring	2
13	Cylinder gasket (paper)	1
14	Cylinder	1
15	Hex socket screw M5x20 (Grade 8.8)	4
16	Spark plug	1
17	Spark plug cap	1
18	Hex socket screw M5x22	2
19	Carburetor gasket	1
20	Intake pipe	1
21	Intake pipe gasket	1
22	Air filter mesh	1
23	Hex socket screw M5x50	2
24	Flat washer 5x10x1	2
25	Air filter inner housing assembly	1
25-1	Cross recessed pan head self-tapping screw ST4.2x8	1
25-2	Valve	1
25-3	Air filter inner housing	1
25-4	Air filter outer housing	1
25-5	Valve handle	1
26	Carburetor	1
27	Air filter sponge	1
28	Air filter outer cover	1
29	Hex socket combination screw M5x20	12
30	Electric starter assembly	1
30-1	Switch protection cover	1
30-2	Power switch	1
30-3	Reset tension spring	1
30-4	Cylindrical pin 1.5x16	1
30-5	Electric starter cover	1
30-6	Wear-reducing washer 14x22x0.5	1
30-7	Shaft circlip Ø8	1
30-8	Pawl gearwheel 51 teeth	1
30-9	Secondary gear 13-15 teeth	1
30-10	Starter torsion spring	1
30-11	Flat washer 8x18x1.2	1
30-12	Cross pan head combination screw M4x10	2
30-13	Starter pawl	1
30-14	Hex socket large head screw M5x14	1

30-15	Motor	1
30-16	Motor cover	1
30-17	Cross pan head self-tapping screw ST3x10	6
30-18	Cross pan head self-tapping screw ST4x16	4
30-19	Control box assembly	1
30-20	18650 battery	3
30-21	Foam pad	6
30-22	40A fuse	1
31	Clutch drum assembly	1
31-1	Pawl	2
31-2	Drum	1
31-3	Pawl torsion spring	2
31-4	Open circlip Ø4	2
32	Oil seal 12x22x7	1
33	Left crankcase	1
34	Crankcase gasket	1
35	Bearing 6202/P6	2
36	Crankshaft connecting rod	1
37	Needle bearing K101316	1
38	Woodruff key 3x13x5	1
39	Right crankcase	1
40	Hex socket screw M5x35	4
41	Oil seal 15x30x7	1
42	Flywheel	1
43	Flat washer 8x16x1.6	1
44	Spring washer M8	1
45	Hex nut M8	1
46	Ignition coil	1
47	Cross recessed pan head self-tapping screw ST4.8x12	2
48	End cover	1
49	Shaft circlip Ø14	1
50	Bearing 6202/RS	1
51	Hole circlip Ø36	1
52	Driven plate	1
53	Fan shroud	1
54	Clutch step bolt	2
55	Special washer 10	2
56	Clutch assembly	1
56-1	Clutch shoe	2
56-2	Clutch tension spring	2
57	Flat washer 8x16x1.6	2
58	Fuel tank assembly	1
58-1	Fuel tank	1
58-2	Sealing gasket	1
58-3	Inlet nozzle	1
58-4	Fuel tank core	1
58-5	End cover	1
58-6	Damping chain	1
58-7	Fuel filter	1
58-8	Fuel pipe	1

58-9	Fuel pipe seat	1
58-10	Return pipe	1
58-11	Fuel pump body	1
59	Fuel tank damper sleeve	2
60	Fuel tank	1
61	Damper sleeve	1
62	Connecting pipe	1
62	Hole circlip Ø45	1