



No.	Part name	Qty.
1	Hex socket combination screw M5x12	2
2	Muffler assembly	1
2-1	Muffler cover	1
2-2	Muffler cover clamp plate	1
3	Cross recessed pan head self-tapping screw ST4.8x16	2
4	Air button cover	1
5	Air button top cap	1
6	Hex socket combination screw M5x16 (large washer)	1
7	Muffler gasket	1
8	Muffler	1
9	Spring washer Ø6	2
10	Hex socket screw M6x55	2
11	Piston pin	1
12	Piston pin circlip	2
13	Piston	1
14	Piston ring	2
15	Cylinder gasket (paper)	1
16	Cylinder	1
17	Hex socket screw M5x20 (Grade 8.8)	4
18	Spark plug	1
19	Spark plug cap	1
20	Hex socket screw M5x22	2
21	Carburetor assembly	1
24	Air filter mesh	1
25	Hex socket screw M5x50	2
26	Flat washer 5x10x1	2
27	Air filter inner housing assembly	1
27-1	Cross recessed pan head self-tapping screw ST4.2x8	1
27-2	Valve	1
27-3	Air filter inner housing	1
27-4	Valve handle	1
28	Carburetor	1
29	Air filter sponge	1
30	Air filter outer cover	1
31	Air filter paper element	1
32	Air filter outer cover clamp plate	1
33	Hex socket combination screw M5x20	12
34	Starter assembly	1
34-1	Rope bushing (for trimmer)	1
34-2	Starter rope	1
34-3	Starter handle	1
34-4	Starter cover	1
34-5	Starter recoil spring 0.6	1
34-6	Rope pulley	1
34-7	Starter torsion spring	1
34-8	Starter pawl	1
34-9	Starter step self-tapping screw	1
35	Clutch drum assembly	1
35-1	Pin	2

35-2	Clutch drum	1
35-3	Pin torsion spring	2
35-4	Open circlip Ø4	2
36	Oil seal 12x22x7	1
37	Left crankshaft	1
38	Crankcase gasket	1
39	Bearing 6202/P6	2
40	Crankshaft connecting rod	1
41	Needle bearing K101316	1
42	Woodruff key 3x13x5	1
43	Right crankshaft	1
44	Oil seal 15x30x7	1
45	Flywheel	1
46	Hex socket screw M5x35	4
47	Flat washer 8x16x1.6	1
48	Spring washer M8	1
49	Hex nut M8	1
50	Ignition coil	1
51	Side cover	1
52	Clutch step bolt	2
53	Special washer 10	2
54	Clutch assembly	1
54-1	Shoe (clutch shoe)	2
54-2	Clutch tension spring	2
55	Flat washer 8x16x1.6	2
56	Flat washer 8x16x1.6	2
57	Flat washer 5x15x1	2
58	Front fuel guard	1
59	Fuel tank assembly	1
59-1	Fuel tank	1
59-2	Spacer sleeve 5.5x8x6 Ø14	4
59-3	Return fuel pipe	1
59-4	Fuel pipe clamp	1
59-5	Fuel pipe	1
59-6	Fuel filter	1
59-7	Fuel tank cap	1
59-8	Sealing ring	1
59-9	Inlet nozzle	1
59-10	Fuel pump core	1
59-11	End cover	1
59-12	Damping chain	1