



No.	Part name	Qty.
1	Screw	4
2	Starter Assy	1
3	Gasket	1
4	Nut	1
5	starter dial	1
6	Nut	1
7	Oil Seal	1
8	Crankcase(L)	1
9	Bearing	1
10	Fuel Tank Assy	1
11	gasket	2
12	Screw	2
13	Rubber shock absorber	1
14	plate	1
15	Moonkey	1
16	Crankcase Gasket	1
17	Pin	2
18	Crankcase (Right Side)	1
19	Screw	4
20	Lignition	1
21	Fly Wheel	1
22	Nut	1
23	Washer	1
24	Clutch	1
25	Waveform elastic cushion	2
26	Screw	2
27	Deflector	1
28	Pin	3
29	Fly Wheel Cover	1
30	Screw	2
31	Air Filter Cover	1
32	Screw	2
33	Muffler	1
34	Muffler Gasket	1
35	Cover	1
36	Cylinder Cover	1
37	Screw	4
38	Spark Plug	1
39	Screw	2
40	Air Filter Assy	1
40-1	Twist Lock	1
40-2	Air Filter Cover	1
40-3	Empty filter holder	1
40-4	Filter sponge	1
40-5	Air Filter Seat	1
41	Carburetor	1
42	Carburetor Gasket	1
43	Manifold	1
44	Manifold Gasket	1

45-1	Cylinder	1
46	Cylinder Gasket	1
47	Piston Ring	1
48	Piston	1
49	Crankshaft	1
50	Needle Bearing	1
51	Piston Pin	1
52	Snap	2