



No.	Name	Qty
1	Power Cord	1
2	Cable Sheath	1
3	Press Board	1
4	Self-Tape Screw	5
5	switch	2
6	Switch Trigger	1
7	lock off switch spring	1
8	Lock off switch	1
9	Capacitor	1
10	Push Rod	1
11	Push Rod Spring	1
12	carbon brush cap	2
13	Hex Nut	1
14	Left housing	1
15	sleeve for carbon brush cap	2
16	Soft Start	1
17	Right housing	1
18	Self-Tape Screw	7
19	Machine screw	1
20	Carbon Brush	2
21	Brush Holder	2
22	Hex Nut	2
23	Rear Bracket for motor	1
24	Deep Groove Ball Bearing	2
25	Rotor	1
26	Deep Groove Ball Bearing	1
27	Pinion	1
28	Flange Head Nut	1
29	Stator	1
30	Self-Tape Screw	11
31	motor front bracket	1
32	Flat washer	2
33	Spring Washer	2
34	Stator Screw	2
35	Self-Tape Screw	1
36	auxiliary handle	1
37	Connecting Rod	1
38	protecting board with insert	1
39	Spring Cylinder plug	1
40	Reduction Gearbox	1
41	Spring gasket	1
42	Flange head Self-Tape Screw	1
43	Oil Tank Cap	1
44	Cap Retaining Hook	1
45	Oil Tank Cap Sealing Ring	1
46	Valve	1
47	Oil Tank	1
48	Oil Tank Connecting Tip Cap	1
49	Foam Boss	1

50	Oil Tank Connecting Tip	1
51	Oil Tank Sealing Ring	1
52	Oil Inlet Pipe	1
53	Oil pipe spring	1
54	Oil Pump Assembly	1
55	Oil Outlet Pipe	1
56	Oil pipe spring	1
57	Oil Outlet Tip	1
58	O Sealing Ring	1
59	Flat Washer	1
60	Brake Rod	1
61	Brake Rod Insert	1
62	Brake Rod Fixing Board	1
63	Sunk Self-Taping Screw	1
64	Support plate	1
65	Lock Nut	1
66	Sunk Self-Taping Screw	3
67	Gear Insert	1
68	Big Gear	1
69	Spindle Sleeve	1
70	Torsion Spring	1
71	Output Shaft	1
72	Deep Groove Ball Bearing	1
73	dust proof cover	1
74	Self-Tape Screw	3
75	Cap for Reduction Gearbox	1
76	Self-Tape Screw	2
77	Sealing Ring	1
78	Buffer Board	1
79	Sunk Self-Taping Screw	2
80	Self-Tape Screw	1
81	Tension Spring	1
82	Sprocket	1
83	E shape Circlip	1
84	Bush	1
85	Screw to fix the Chain Bar	1
86	Push Plate	1
87	Spiral Wheel	1
88	Gasket	1
89	Circlip	1
90	Chain Wheel Cover	1
91	Circlip	1
92	Adjustig Ring	1
93	Tighten Knob	1
94	Chain Bar	1
95	Chain	1
96	Bar sleeve	1