



No.	Part name	Qty.
1	Hexagon socket cap screws	8
2	Starter assy	1
3	Starter handle	1
4	Bushing	1
5	Starter rope	1
6	Starter cover	1
7	Spring	1
8	Ratchet seat	1
9	Starter spring	1
10	Washer	1
11	Ratchet	1
12	Screw	1
13	Washer	1
14	Nut	1
15	Pully	1
16	Washer	1
17	Oil seal(R)	1
18	Crankcase(R)	1
19	Crankcase gasket	1
20	Oil bearing 6202	2
21	Crankshaft	1
22	Key	1
23	Needle bearing K10*13*16	1
24	Piston ring	2
25	Piston pin	1
26	Piston	1
27	Piston Ring	2
28	Cylinder gasket	1
29	Cylinder	1
30	Screw M5×20	7
31	Spark plug	1
32	Ignition line	1
33	Spark plug cap	1
34	Ignition	1
35	Pin Φ5×10	2
36	Crankcase (L)	1
37	Screw M5 x 35	4
38	Oil seal(L)	1
39	Fly wheel	1
40	Nut M8	1
41	Washer Φ8×Φ18×1.5(黒)	2
42	Clutch	1
43	Waveform washer	2
44	Screw	2
45	Side cover	1
46	Sprocket	1
47	Snap Φ35	1
48	Bearing 6202	1
49	Connect plate	1

50	Snap Φ 15	1
51	Screw M6x20	4
52	Rubber	1
53	Snap	1
54	Splint	1
56	Screw	1
55	Screw	2
57	MUffler	1
58	Muffler gasket	1
59	side plastic	1
60	Cylinder cover	1
61	Wind guide plate	1
62	screw	1
63	Wind guide plate	1
64	Screw	3
65	Inlete pipe gasket	1
66	Inlete pipe	1
67	Carburetor gasket	1
68	Carburetor	1
69	Air filter Assy	1
70	Air filter base	1
68	Iron sheet	1
71	Screw	2
72	Air filter sponge	1
73	Air filter cover	1
72	Air filter locknut	1
74	Screw	1
75	Throttle pole	1
76	Throttle	1
77	Fuel tank assy	1
78-79-80	Fuel cap assy	1
79	Gasket	1
82	inlet pipe	1
81	Outlete pipe	1
83	Fuel pipe base	1
83	Oil filter	1
85	Fuel tank	1
86	Rubber	4
87	Fuel tank protector	1